


Sport-Thieme Sky Lights

Thank you very much for choosing a Sport-Thieme product!

Please read the instructions fully before you assemble the equipment, so you can enjoy the product and safety is guaranteed. We are happy to answer any questions you may have.

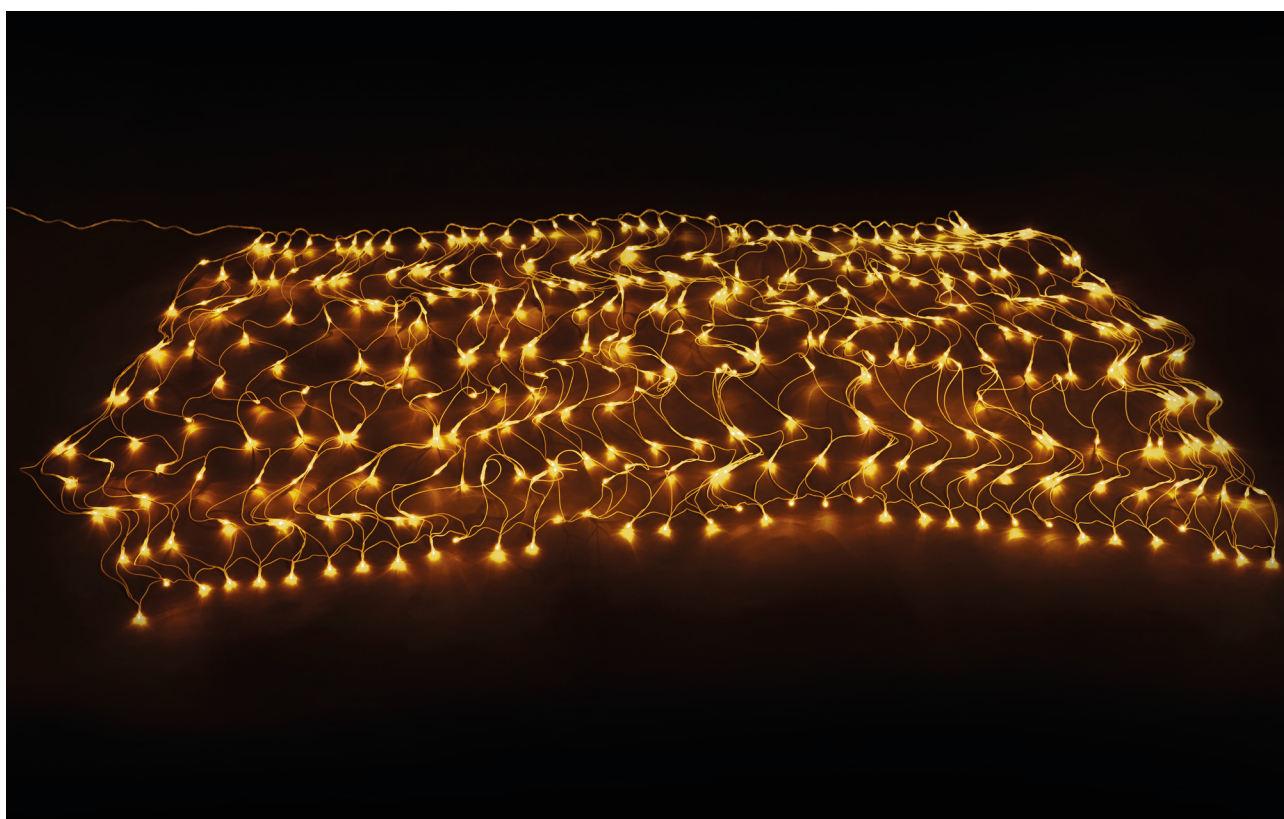

Warning

Safety extra low/voltage transformer for Indoor use only. Must not be exposed to the weather

Please read these instructions and retain for future reference to ensure the safe and satisfactory operation of the light set

Safety information

Remove set from box before connecting to power supply.

Use only with the supplied transformer. Light set is safe for outdoor use however transformer must remain indoors or undercover at all times.

Disconnect from mains when not in use.

Do not expose to direct heat, flames or submerge in water. Bulb should not be in contact with combustible materials or materials likely to melt.

Avoid damage to and rough handling of the wire insulation cable, controller (if set is sold with controller) and bulbs.

Do not connect this set electrically to any other set. Do not use if wire insulation cable is cut, frayed or damaged or if there are any loose connections of exposed wires.

Take care that the cable is not damaged if being passed through a doorway or window, especially if the door or window frame is metal.

LED bulbs cannot be replaced. Do not attempt to remove bulbs.

Controller action

1. Combination
2. In waves
3. Sequential
4. Slo-Glo
5. Chasing/Flash
6. Slow fade
7. Twinkle/Flash
8. Steady on

Trouble Shooting

If lights do not work:

- Make sure lights are connected to the transformer.
- Make sure that the connectors are fully inserted into the transformer box.
- Make sure that the transformer is plugged into a 230V AC outlet.
- Make sure that the outlet has power (make sure any switch that controls the outlet is in the on position).