



Assembly instructions

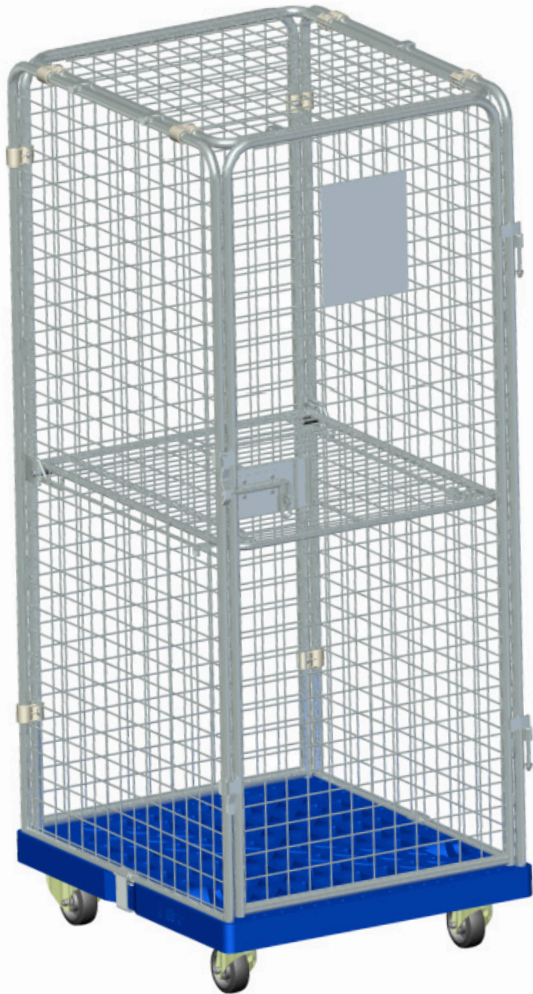

Anti-theft cage
(ATC)

Roller board 720 x 810 mm

... already fully assembled!

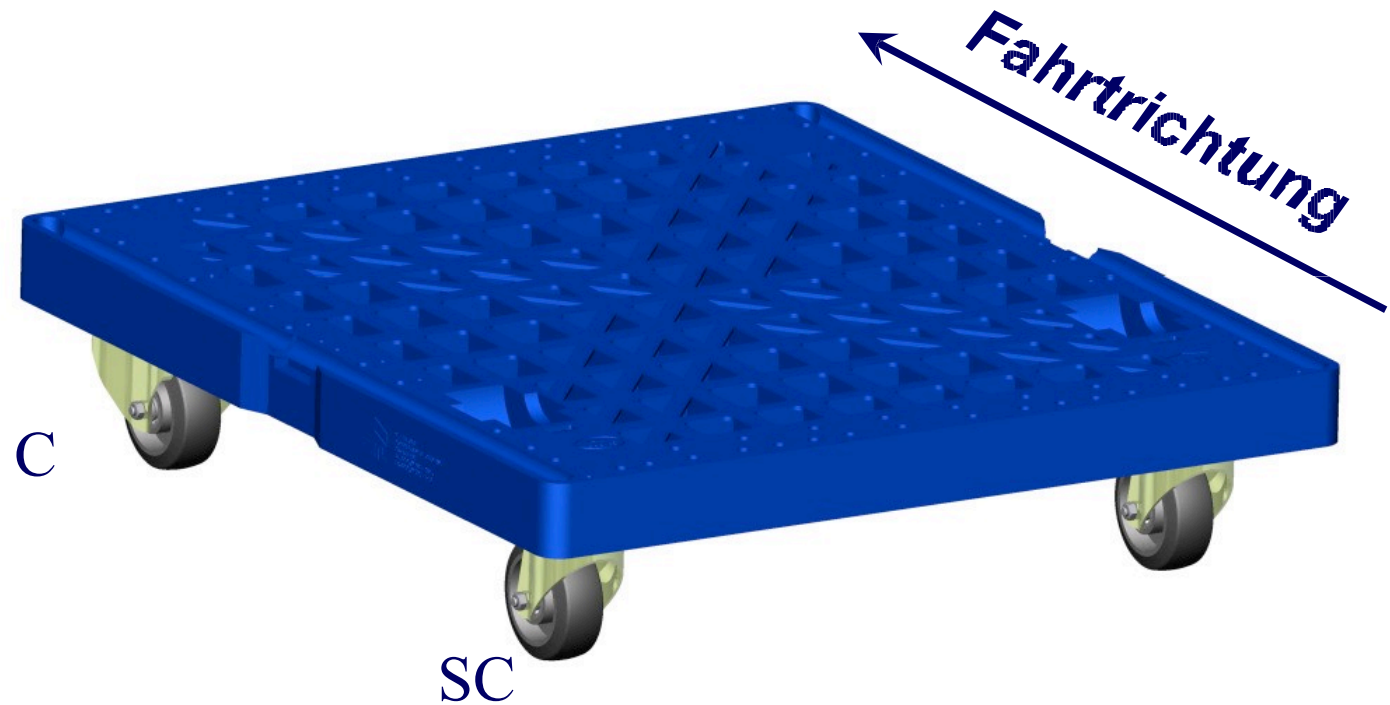


C - castor, SC - swivel castor

Fahrtrichtung = direction of movement

Mount mesh side panels:
A - left mesh panel with
hook
B - right mesh panel
with hinges
Hook and hinges are
on the swivel castor side.

Hook bracket (right &
left) to the roller board
and fix using the screw
included (6.3 x 32 mm).

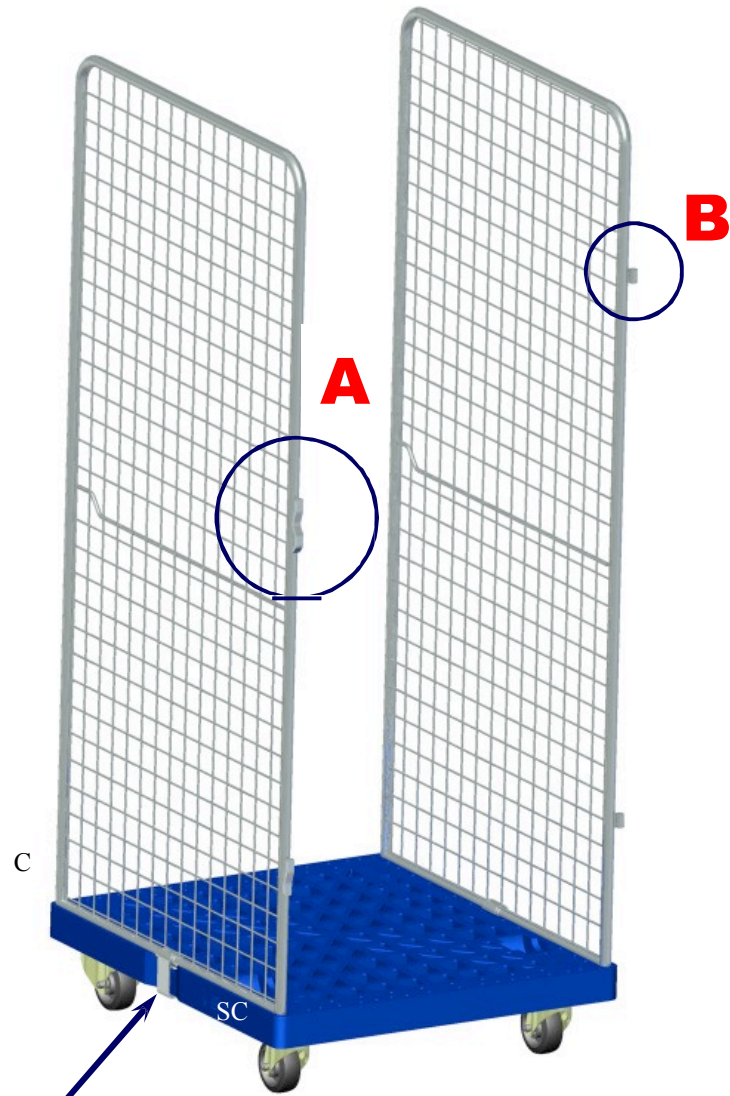

C - castor
SC - swivel castor


Mount back panel and fix to the side mesh panels (left & right) using the plastic clips.

- Mind the recesses and holes on back and side mesh panels!

- Fix the plastic clips with bolts M6 x 33 mm and nuts M6 using the hex key. Nuts are always outside of the cage!


Plastic clips

(colour: white/natural)

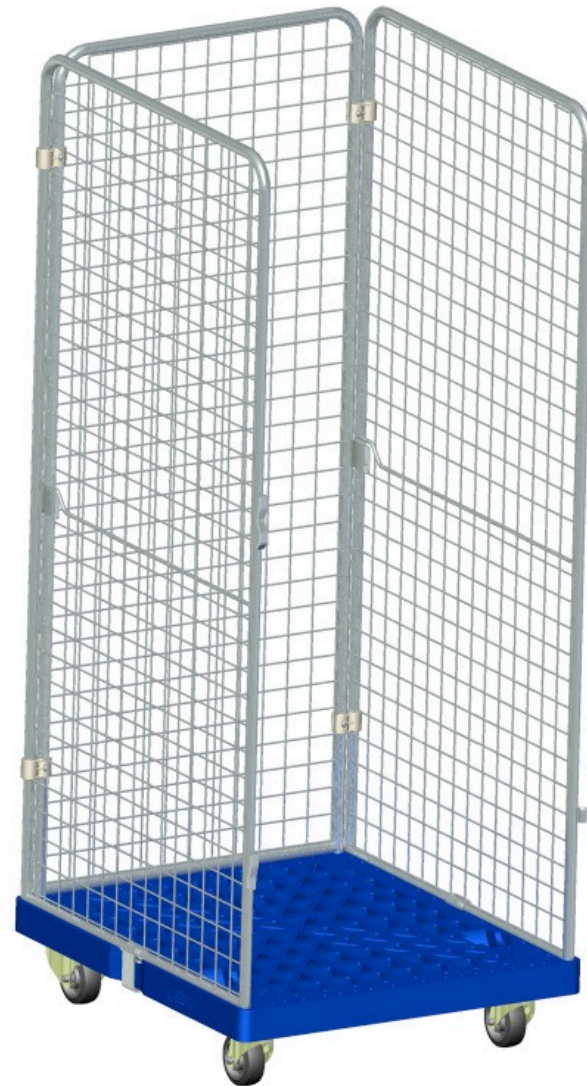

Place roof, with the hooks, onto the side mesh panels and fix to the side mesh panels' horizontal (upper) cross tube using the plastic clips.

- Fix plastic clips with the bolts M6 x 33 mm and the nuts M6 using the hex key. Nuts are always outside of the cage!



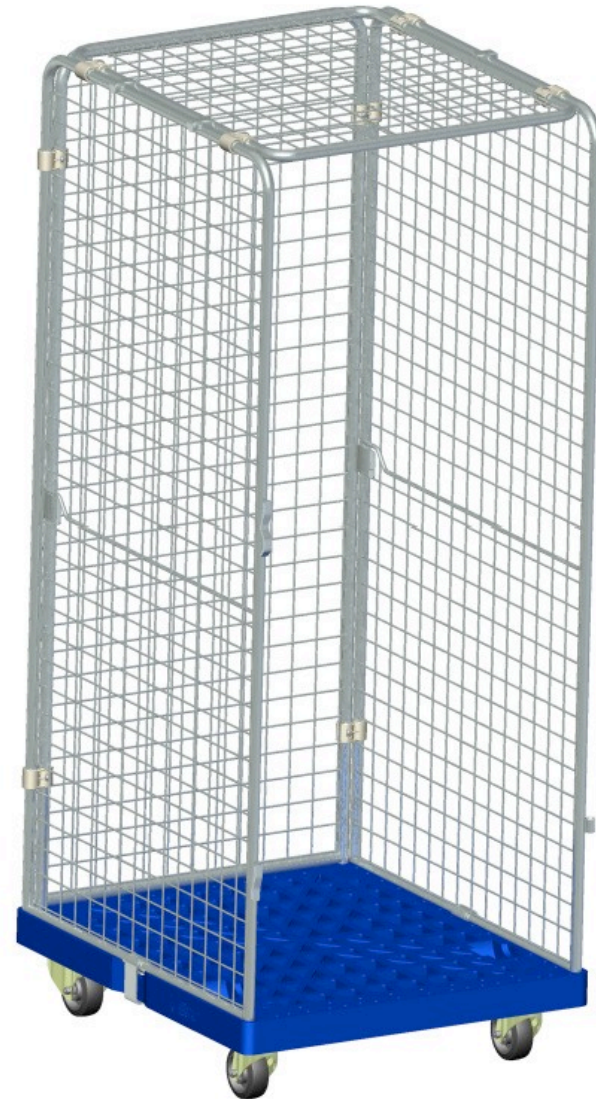


Attach the door
using the pins (A) to the
hinges of the
right side mesh panel.
Make sure that the hinges
fit properly!

Now secure with washer
A8.4 and nut M6 (A).




Opening & closing:

- Pull slide bar (B)
- Lift door and open
- Lower door

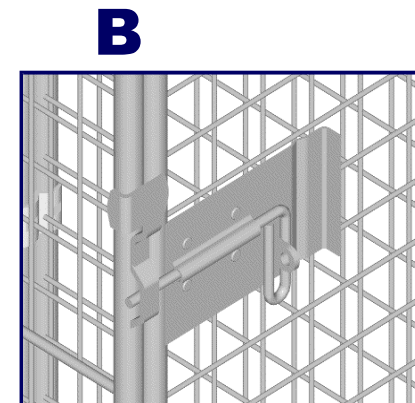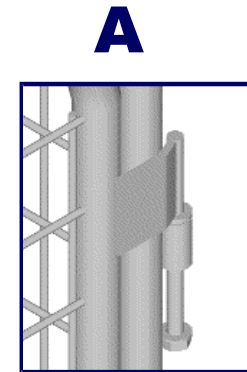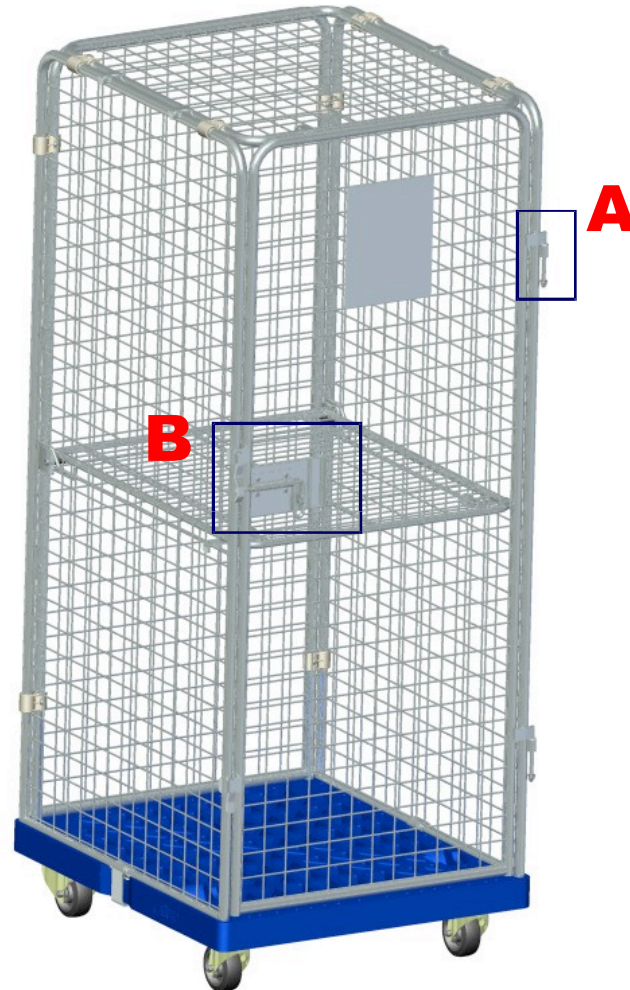

Fix plastic sleeve on one side with bolt M8 x 45 mm and nut M8 (A).

Hang shelf using the U bracket and also fix the other side to the sleeve.

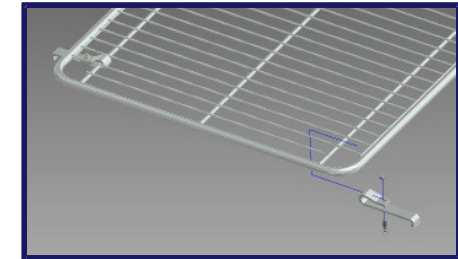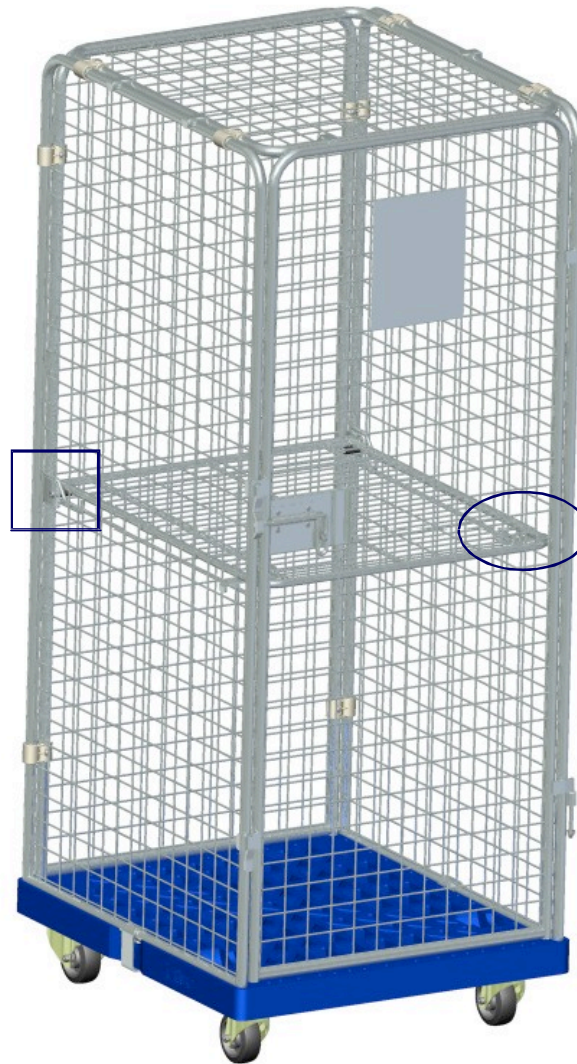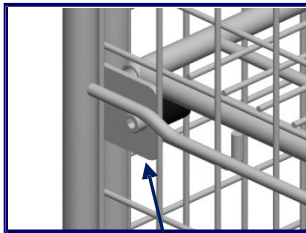

Push support bracket over wire $\text{\O} 8 \text{ mm}$ and fix with bolt M6 x 25 mm and nut M6.